

Battery-Pack Instructions

Charging the battery-pack...

READ THE FOLLOWING! ALWAYS CHARGE THE BATTERY-PACK!

When the ball machine is not in use, the battery-pack should always be plugged into the charger and charged. The charger is designed to maintain the proper health of the battery by only charging it as needed and never overcharging. If a battery is left sitting without the charger connected for an extended period of time, the overall battery-life will start to diminish.



A. Line up the battery connector with the connector from the charger.



B. Plug the battery-pack into the charger connector.



C. Locate the power cord connection on the charger.



D. Plug the power cord into the charger.



E. Plug the power cord into a wall outlet.



F. The light on the charger will turn orange while charging or green when a battery is finished charging or no battery is connected.

Raise the hopper.



Hopper Shown Raised



Hopper Shown Lowered



A. Pull up on the hopper release levers.



B. Pull the hopper up while depressing the hopper release levers.




C. Release the hopper release levers.


How to mount the battery-pack...



A. Grab the battery by the handle.

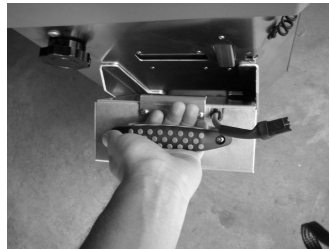

B. Line up the battery with the guides while rocking the battery in.

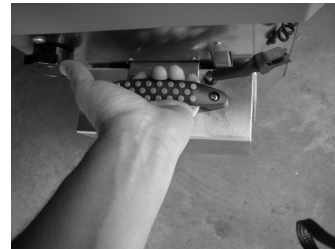

C. Line up the hasp on the battery with the slide in hole.



D. Slide the battery downward to lock it in.



E. When the battery goes all the way in, it should "click".



F. Plug in the battery with the black connector.

How to remove the battery-pack...



A. Squeeze the black connector.



B. While squeezing the black connector, pull the black connector straight out.



C. Grab the battery pack by the handle.



D. Push on the battery lock button.



E. While pushing the battery lock button...



F. Pull the battery-pack up and out.